

GAYLORD | G | ARCHIVAL®

Preserve Today. Share Tomorrow.

Assembly Instructions


FAB966

FAB1012




Lid & Tray Assembly

1. Ships flat.

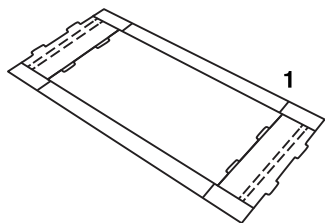


2. Raise sides.

3. Push in end flaps.

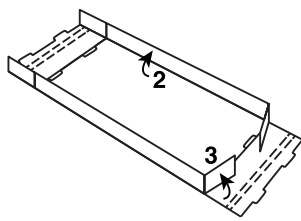

4. Raise ends.

5. Press into notches.

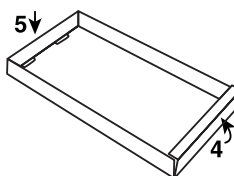

Clamshell Base Assembly

1. Begin with the inside of the box facing you; place the two curves at the bottom.

2. Lift top flap and fold sides inward.

3. Fold right side up and over, ensure that side tab is underneath fold, lock into notch.

4. Repeat on left side.

5. Fold up ends with curved sides and insert into side pocket.



6. Insert tray in the bottom..

7. Place lid on the top.

